
## TOK®-Armabit SK

## Recommendations for use



## Installation steps for TOK®-Armabit SK asphalt reinforcement:


- 1. Position the roll in the unrolling direction (centrally over the crack or joint).
- 2. Roll off around 50 cm of material and carefully peel off the separating film from approx. 30–50 cm of the length of the strip. Ensure that the bitumen layers do not come into contact with one another, as they will stick together and be difficult to separate.

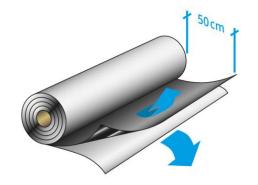

3. Now lift away the peeled separating film and press the exposed bitumen layer onto the surface. Then push the roll back so that the separating film can be removed.



4. Applying slight tension, push the roll in the laying direction while pulling off the separating film. After laying, push the strip down onto the surface using a brush or a small roller.

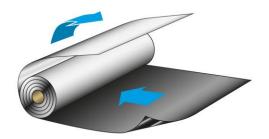

5. Once the end of the section you are laying has been reached, simply cut off the strip using a sharp knife.

## **DENSO GmbH**